

# PIAA


3004 NE 181st. Ave. Portland, OR 97230  
800.525.7422 | www.piaa.com

## AERO VOGUE WIPER INSTALLATION

Congratulations on your recent purchase. We have been producing high performance vision products since 1963. Our motto is to bring the highest quality products to market that our customers can use with pride and confidence. Our heritage in the racing and motorsports world has allowed us to develop products with top racing teams in the world. These relationships have allowed us to develop the most high performing and durable products on the market today.

\* Correct arm types for Aero Vogue Blades

9x3 J-Hook




### CAUTION!!!


- \* Prep-pack is not for consumption
- \* Avoid eye contact
- \* In case of eye contact flush immediately
- \* If pad contacts paint, clean immediately with water
- \* Prep pack chemical contents:
  - Isopropyl alcohol - 98%
  - Ethanol (solution of silicone) - 2%

### Let's install your new wipers


1. Lift the securing clip up.

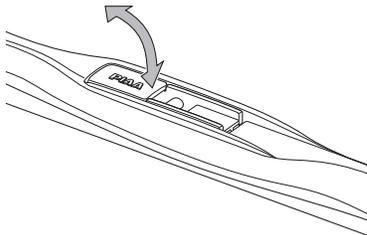

2. Insert wiper hook towards the front of the securing clip and pull towards the rear to snap in place.

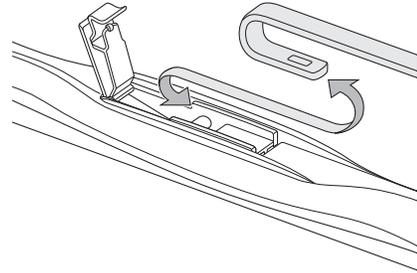

3. Lock wiper arm in place by pressing down on the securing clip.

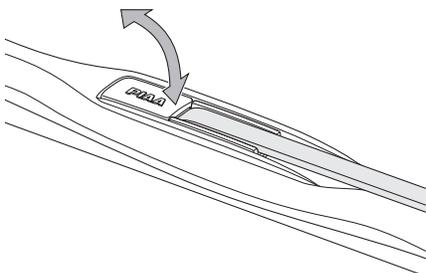

### Silicone Prep-Pack Activator

- 1) Make sure the windshield is dry and debris free.
- 2) Remove the prep-pad from the package and apply in circular motions to the entire windshield. Making sure to even coat the entire windshield.
- 3) Run the PIAA wipers at a medium speed for 3-5 minutes to help the Silicone on the rubber activate to the windshield. There will be a slight haze to the glass, wipe with a dry towel.